


Procyon Errata Sheet

12/27/06

There are two errors in the Procyon manual that we are aware of:

1. **Connector location.** The USB and start/stop button positions were reversed. The proper diagram follows:

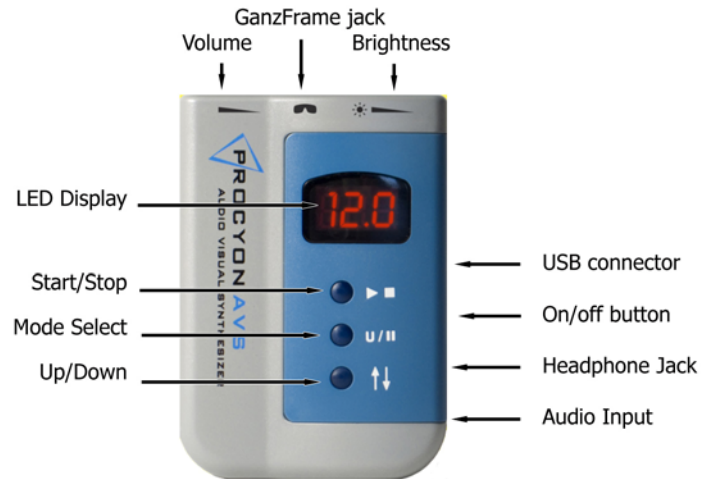

2. **Selecting sessions.** The manual incorrectly indicates that you would press the up/down and Start/Stop buttons to cause the display to decrement the session number.

The correct procedure is to press the Up/Down and Mode Select buttons to decrement the session number.

Please contact us if you find any other errors in the manual (Robert@mindplace.com).